


# FLUFFO

Mounting instructions  
of the **FIRE RESIST** wall panels

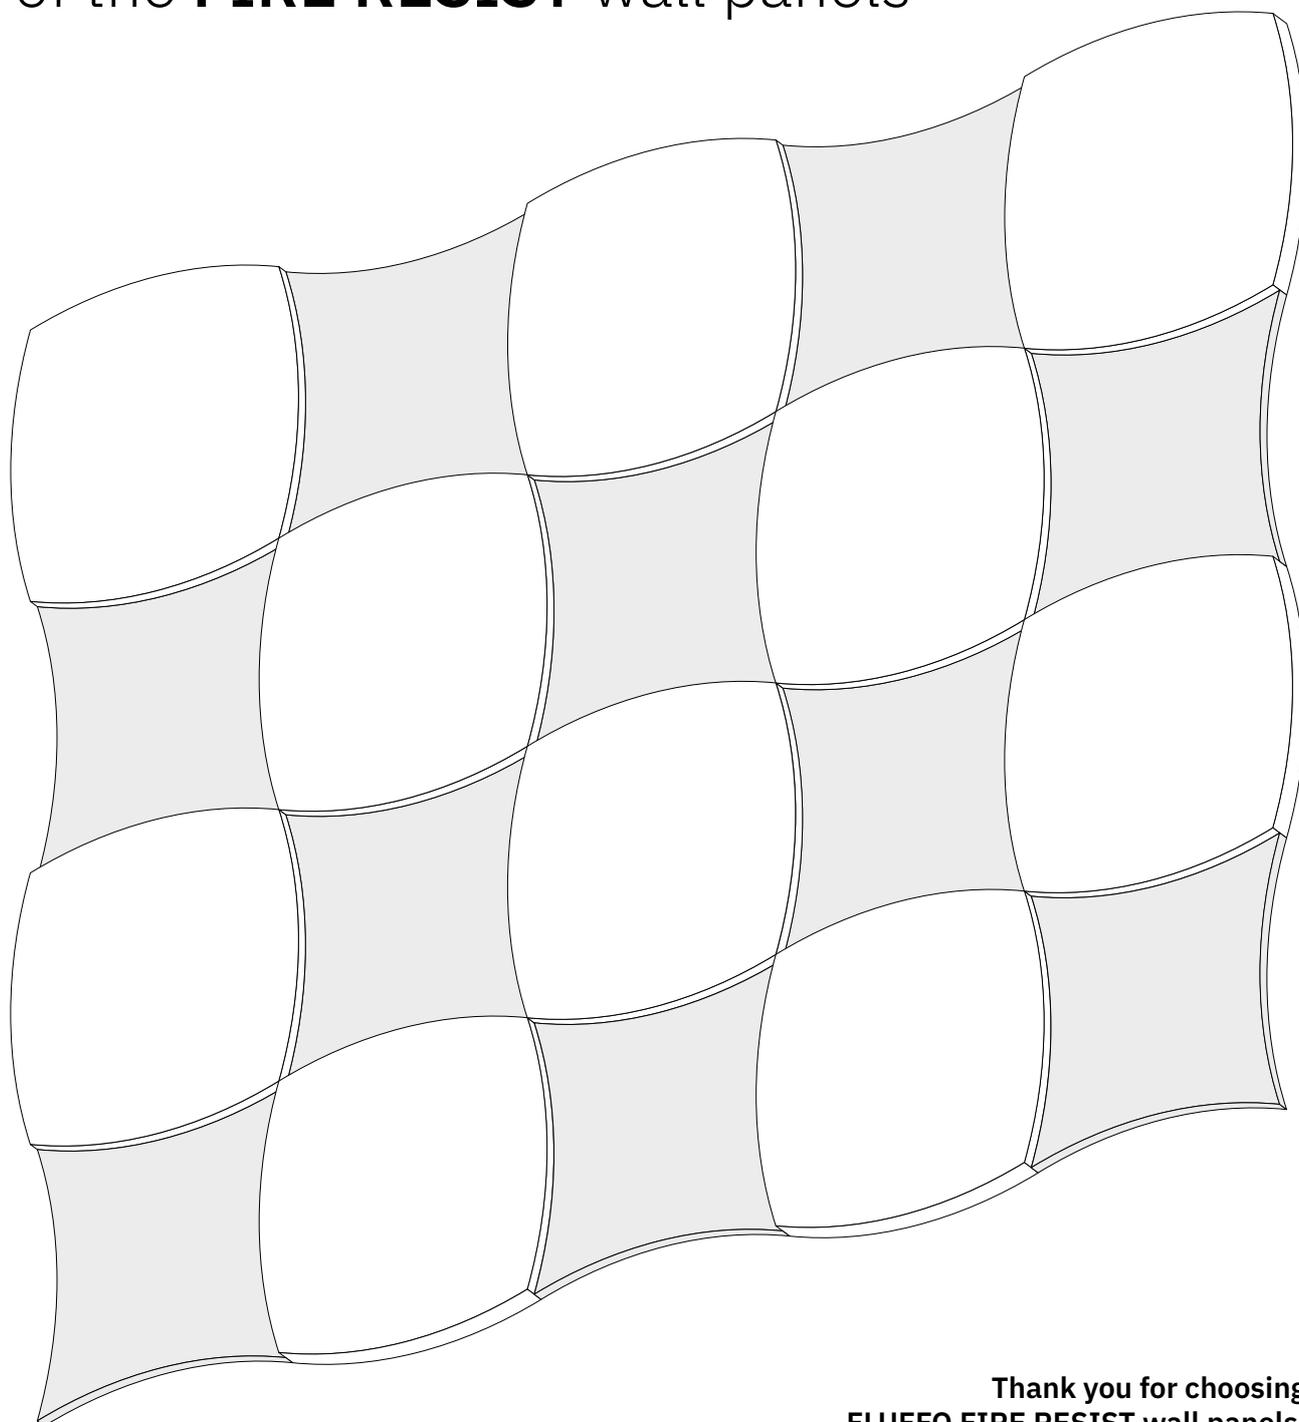

**Thank you for choosing  
FLUFFO FIRE RESIST wall panels.**

Their installation is simple, fast and clean.  
You can do it yourself easily, just follow these instructions.

Should you need our help  
at any stage of assembly please call:

**[www.fluffo.pl](http://www.fluffo.pl)**

**+48 502 552 392**

## DIRECTIONS FOR USE:



The panels should not be exposed to direct, intense sun light. After some time in such conditions colours might fade and discolorations may appear.



Do not apply pressure with your fingers, you might leave permanent dents on the surface of the panel.



The panels are vulnerable to mechanical damage. Be careful not to damage the panels with sharp objects, backrests, edges or corners of furniture. Leaning against the panels is not advisable.



The panels should be mounted away from open flames, sparks and other heat sources such as electric heaters.



Avoid staining the panels.

## CLEANING AND CARE INSTRUCTIONS:



The Fluffo finish covering our panels is antistatic and does not attract dust. However, dust can settle on the panels, just like on any furniture. In order to remove dust, use a soft brush or vacuum with a standard brush for upholstered furniture.



Lightweight stains can be removed with a soft sponge slightly moistened with diluted detergent. When cleaning please wipe the whole panel surface, so that you don't leave rubbing traces in one spot. Do not soak the panels it will cause swelling. In extreme cases, when the stain penetrated into the panel and despite the cleaning is still visible, the dirty panel can be easily replaced with a new one.



Be sure not to over rub the panel surface with a wet sponge and avoid strong detergents, such as bleach or washing powder.

The above information is based on our best knowledge, and serves only as a guideline. We are always happy to provide information and technical advice regarding our products. We reserve the right to make changes in our offer at any time. It is up to the customer to make sure that our panels' technical characteristics fit the purpose set by the customer. We will not take responsibility for the use of our products against our recommendations.










## 1 Preparation for installation

Prepare:

- A** FLUFFO FIRE-RESIST panels
- B** The adhesive (we recommend High Tack by Den Braven)
- C** Cartridge applicator gun
- D** Metal ruler
- E** Bubble level
- F** Pencil
- G\*** Measuring tape
- H\*** Carpet knife
- I\*\*** Plunge saw with guide rail

\* when you need to cut a few panels

\*\* when there is a large number of panels to be cut

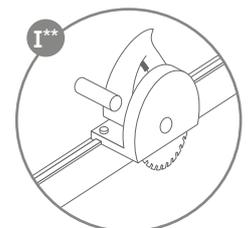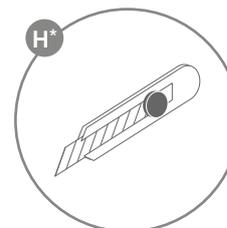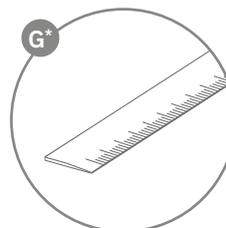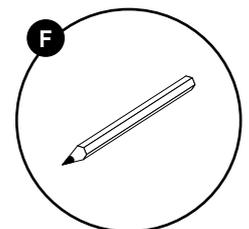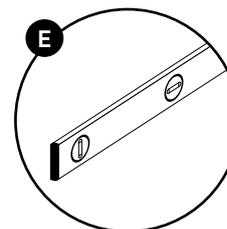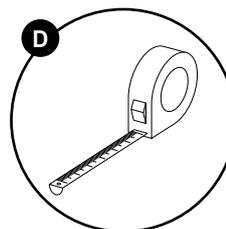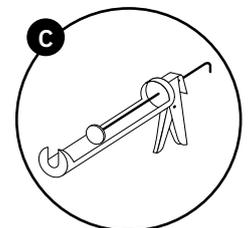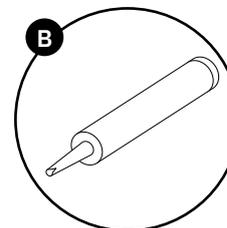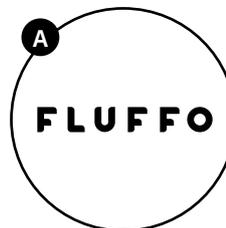

Should you need our help  
at any stage of assembly please call:


**+48 502 552 392**

---

## 2 Designation of the starting lines

**ATTENTION!** Make sure that the wall is even, clean and dust free. Check if the plaster is durable and does not fall off.

- A** Draw the start lines from which you will begin the installation. Should the panel composition be symmetric – fix the centre line in the middle and begin the installation from this line.
- B** In order to monitor the panel alignment, you can draw consecutive lines reflecting the future arrangement of the panels.

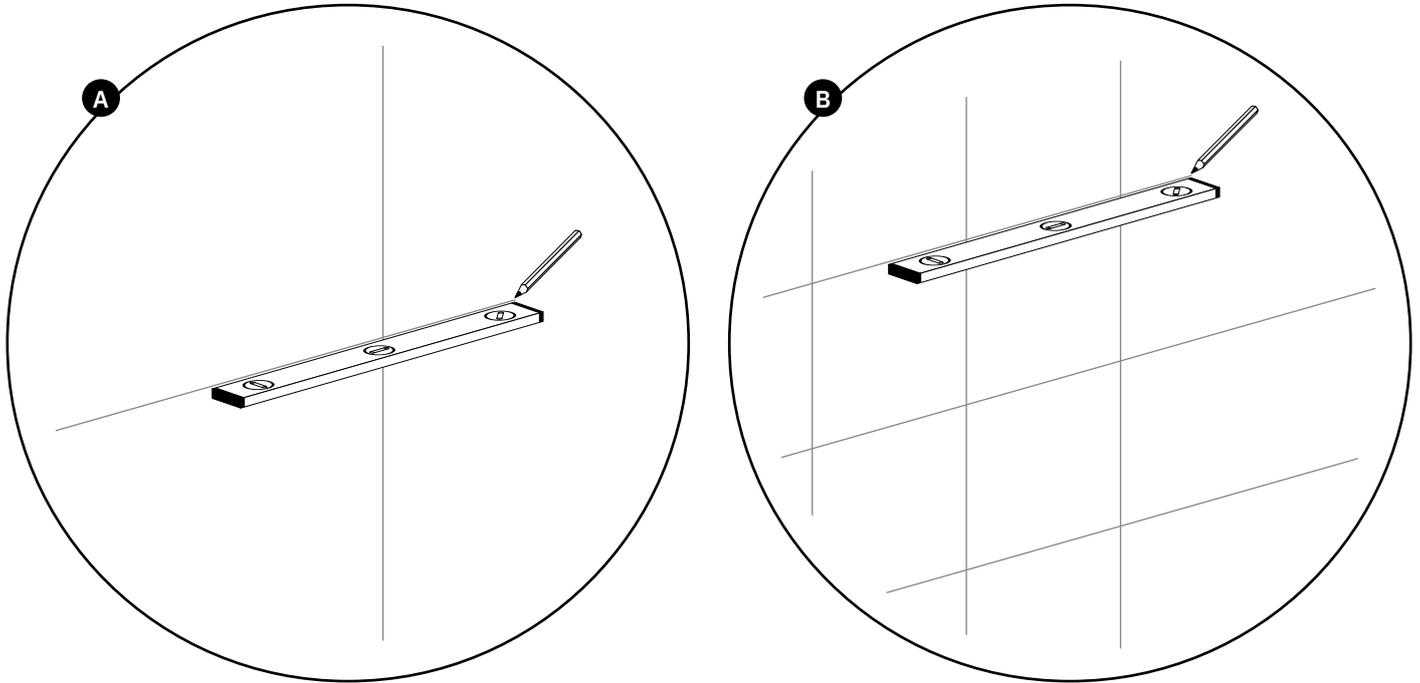


---

## 3 Application of the adhesive

**ATTENTION!** The adhesive should be at room temperature.


- A** Cut the original cartridge applicator at an angle, so that you get rid of the original application tip. This will allow for a wide, low strip of adhesive.
- B** To apply the adhesive to the panel press the tip of the applicator to it and slowly move it along the surface simultaneously extruding the adhesive.
- C** Apply thin, parallel strips of the adhesive every 5 to 7 cm on the entire surface of the panel (keep a 3 cm margin from the edge of the panel). Should the layer of the adhesive be too thick distribute it with a spatula or a carpet knife. This is important especially when the composition consists of uniform thickness panels.

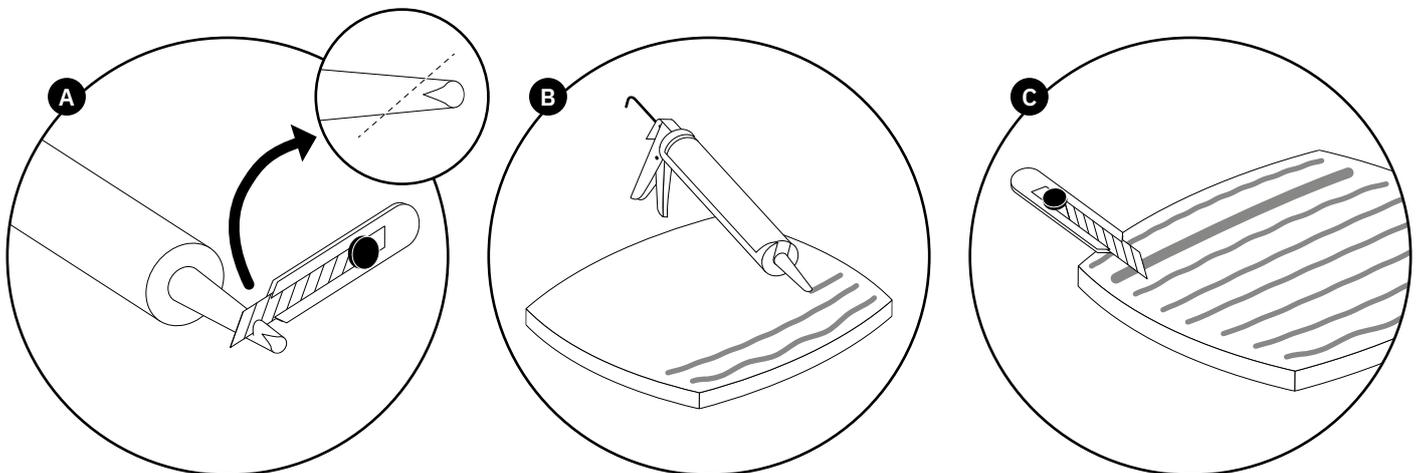

**ATTENTION!** Avoid staining the surface of the panel with the adhesive. Should you get some glue on the panel gently remove it with the tip of the carpet knife or a sponge. Do not smear the glue! Do not allow for the adhesive to dry – scraping it off may damage the panel surface. It is not recommended to glue the panels to one another.

## 4 Installation of panels


- A** Place the panel on the wall (**A1**), then apply light pressure to the surface of the panel with your hand (**A2**). **ATTENTION!** Do not apply pressure with your fingers you might leave dents. If the strips of adhesive are of even height there is no need to apply strong pressure against the panel when mounting it on the wall. Strong pressure application may cause permanent damage to the panel surface.
- B** Aim to adjust the fit of the panels immediately. The adhesive holds the panel on the wall instantly, it remains flexible for some time, which facilitates the correction of the fit of the panels. To level the glue at the bottom of the panel, place it on the wall at a distance of about 0,5 cm from the adjacent panel and slide it into place (**B1**).

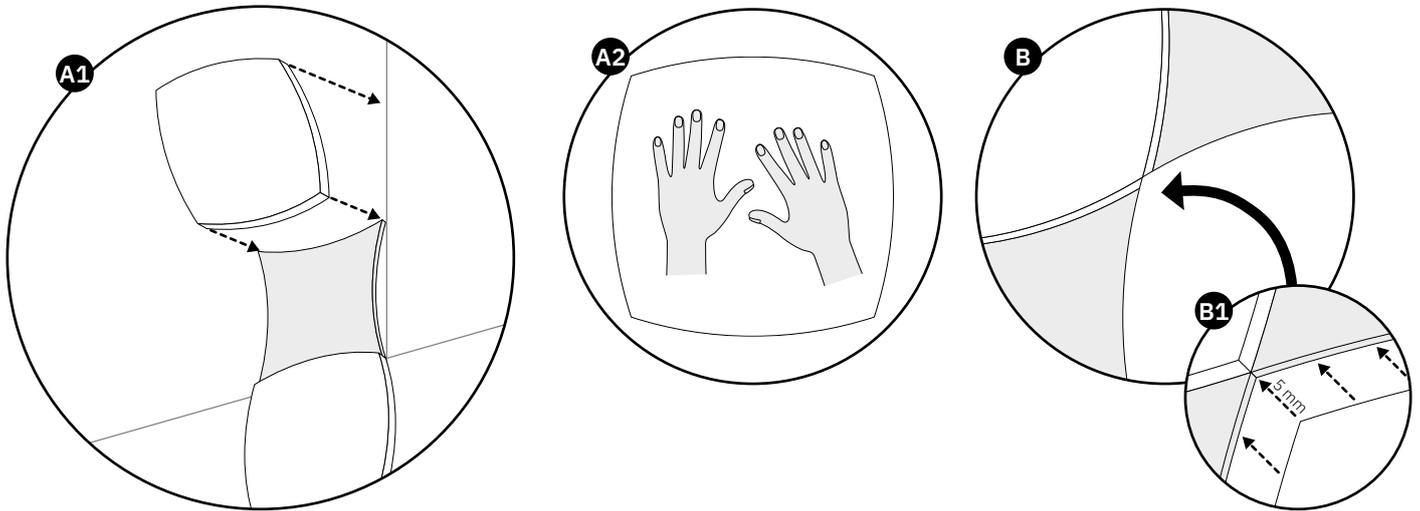

## 5 Cutting panels

**ATTENTION!** First test the cut on a spare part of a panel.

- A** With the use of a metal ruler gently mark the cutting line on the surface of the panel. **ATTENTION!** Do not press the ruler too hard against the panel.
- B** Start the cut from the edge of the panel, then proceed to cut the surface of the panel along the ruler's edge using a sharp carpet knife (**B1**). When there is a large number of panels to be cut, instead of a knife use a plunge saw with a guiding rail (**B2**).
- C** Remember that the cut will reveal the inside structure of the panel, that is why you should cut panels only in the case when the revealed edge will not be visible i.e. it will be mounted adjacent to a ceiling or a perpendicular wall.

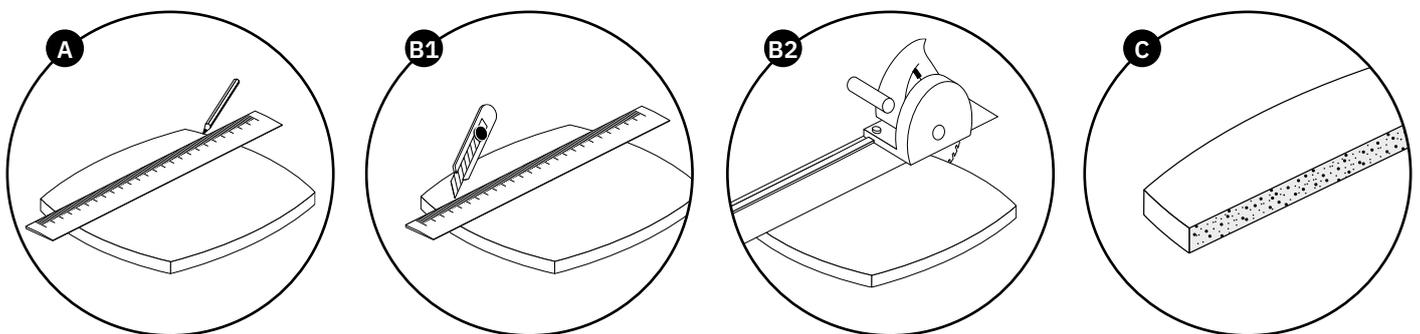

## 6 Final remarks

- A** After completing the panel installation allow for the adhesive to dry completely (24h).



- B** Then vacuum the panels with a clean, soft upholstery brush at low suction power.

